

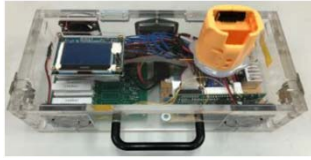


| | | | | | | | | |
|------------------------------------|---|------------------------------------|-------------|-------------|---|--------------------------|---|----------------------------|
| Battery Model | SKC-LB1820 | SKC-LB1840 | SKC-LB1820B | SKC-LB1820C | SKC-LB1025M | SKC-LB1430 SKC-LB1425 | SKC-LB1030S SKC-LB1025S | SKC-LB0730S SKC-LB0725S |
| Charger Station (With USB Port) | SKC-P120W SKC-P80WN SKC-80WN | SKC-P120W SKC-P80WN SKC-80WN | SKC-P80WN-D | SKC-P80WN-D | SKC-P50W | SKC-P70W | SKC-P50WN-S | SKC-P25W |
| Activator |  | | | |  | |  | |
| | XWF00016-4 | | | | XWF00070-6 | | XWF00070-9 | |

Remarks: SKC-P120W & P50W without USB Port and already discontinued production

2022/8/10