




|                   |   |  |             |             |   |            |             |   |
|-------------------|---|--|-------------|-------------|---|------------|-------------|---|
| Battery Model     | SKC-LB1820  | SKC-LB1840                             | SKC-LB1820B | SKC-LB1820C | SKC-LB1025M   | SKC-LB1425 | SKC-LB1025S | SKC-LB0725S   |
| Charge Station    | SKC-P120W<br>SKC-P80W(N)<br>SKC-80W(N)  | SKC-P120W<br>SKC-P80W(N)<br>SKC-80W(N) | SKC-P80WN-D | SKC-P80WN-D | SKC-P50W  | SKC-P70W   | SKC-P50WN-S | SKC-P25W  |
| Battery Activator | XWF00016-4<br> |  |             |             | XWF00070-6<br> |            |             | XWF00070-9<br> |